


## Instructions for chamber lid Removal and Replacement

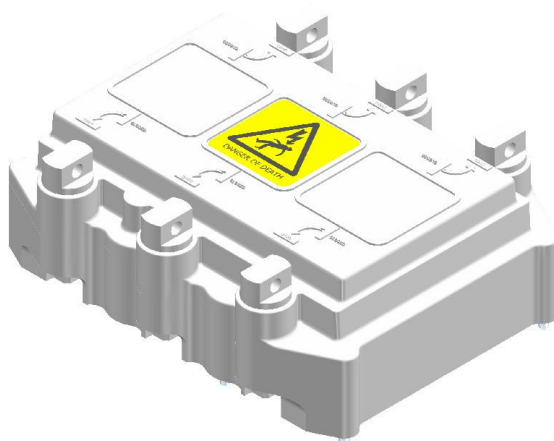

### Suitable for 922 and 924 series link boxes

Issue	Date	Ec/Dr No.	Author	Approved
1	Nov 2017	DRAFT	PB	


PRYSMIAN CABLES & SYSTEMS, OAK ROAD, WREXHAM INDUSTRIAL ESTATE, WREXHAM, LL13 9PH  
UNITED KINGDOM Tel: 08705 133 143

**Important Notice To Users**

**DISCLAIMER**

1. The information contained in these installation instructions is intended to describe the correct method of installing cable accessories under normal conditions. Prysmian has no control over site conditions that may affect installation, and it is the responsibility of the installer to ensure the site is suitable.
2. Installation must always be carried out by a properly trained competent person.
3. Prysmian's liability in respect of all products supplied by it are set out in its Conditions of Sale, a copy of which is available on request.

Chamber lid locking sequence

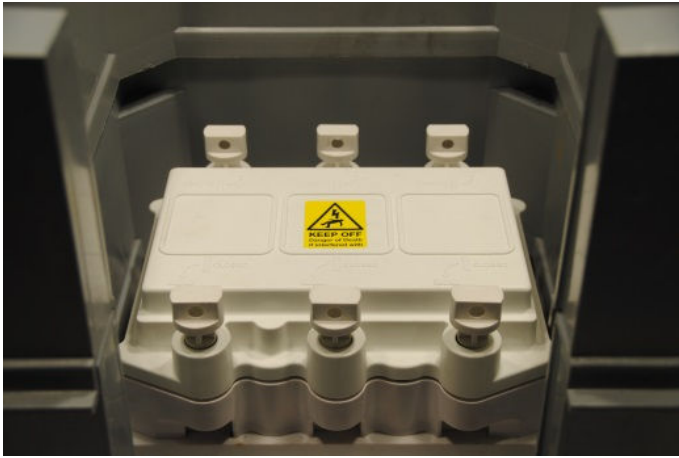

1. Place lid on chamber wall



2. Using recommended tool depress centre toggle



3. Turn Centre toggle 1/8" of a turn as shown



4. Turn opposite centre toggle an 1/8" of a turn as shown



5. Turn corner toggle by 90° until it locks/clicks



6. Turn diagonal toggle by 90° until it locks/clicks

Chamber lid locking sequence




7. Turn adjacent corner by 90° until it locks/clicks



8. Turn diagonal toggle by 90° until it locks/clicks



9. Turn centre toggle by 1/8" of a turn until it locks/clicks

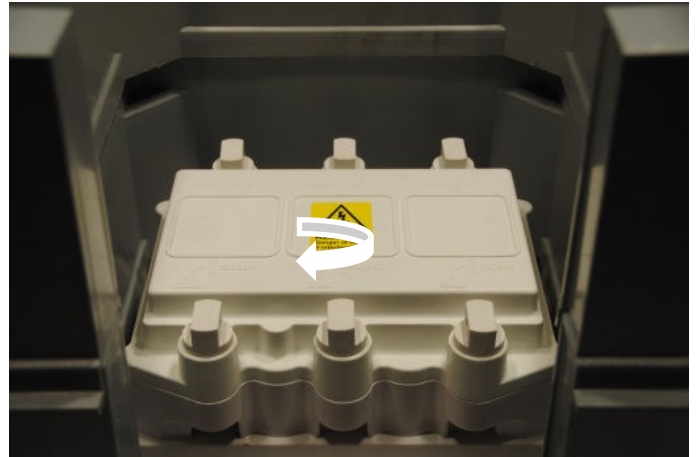


10. Turn remaining centre toggle by 1/8" of a turn until it locks/clicks

Chamber lid Removal sequence



1. Turn corner toggle 90°

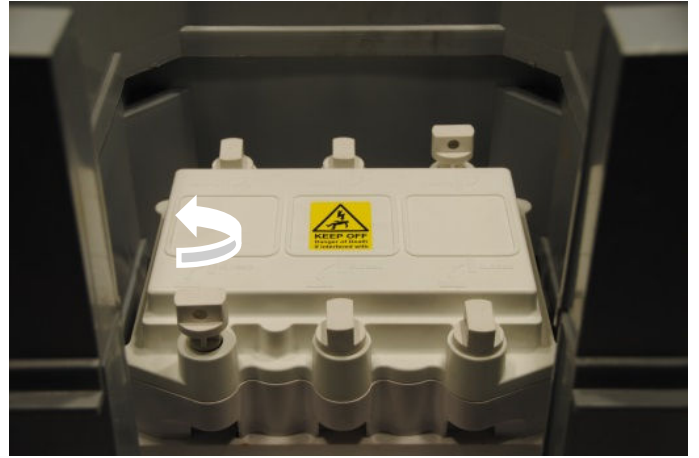

2. Turn diagonal toggle 90°




3. Turn adjacent corner toggle 90°



4. Turn diagonal toggle 90°



5. Turn centre toggle 90°

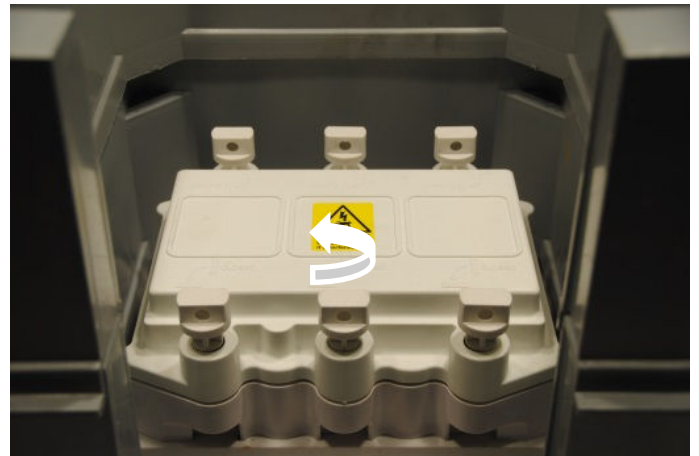

6. Turn opposite centre toggle 90°

7. Remove chamber lid.